


VOLUME SWITCH

Minimum or maximum volume option,
just like the original 1990's version

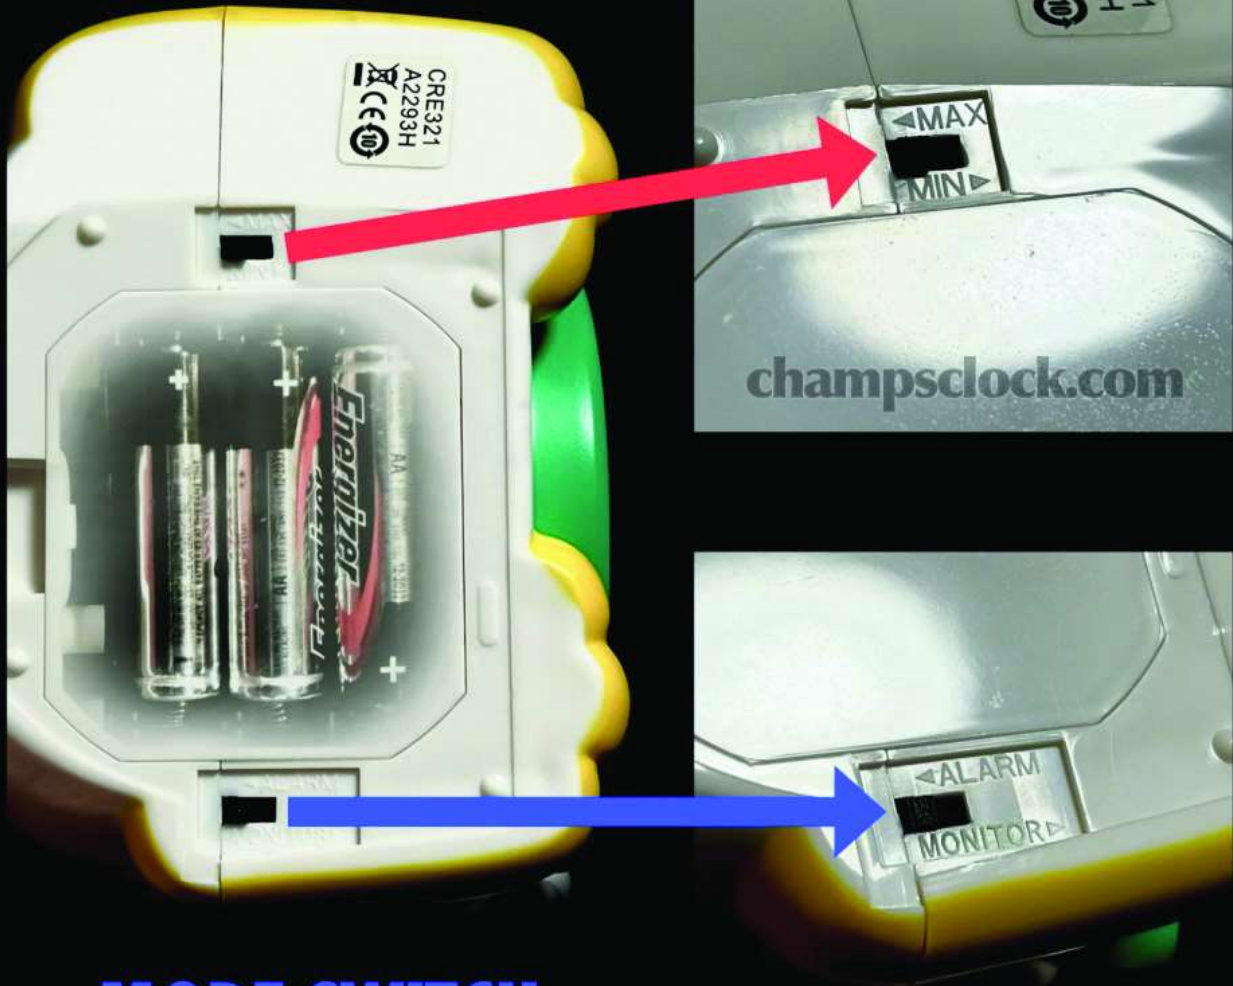

MODE SWITCH

Switch to monitor mode to hear a demo
of the alarm sound whenever you want,
switch to alarm mode to use the alarm

QUESTIONS? CALL OR TEXT CHAMP'S CLOCK SHOP 770-827-1132

Note: the alarm will only sound if the alarm hand is in
the vicinity of the hour hand and the red alarm silence
button on the top is released!

PRESSED



Mouth closed

DEPRESSED

(Released)



Mouth open